

SOIL SENSOR

QUICK START GUIDE

AC INFINITY


PRODUCT WARNING

- **DO NOT FORCE THE SENSOR INTO THE GROUND.**
- **DO NOT** bend the sensor.
- Read all instructions before installing and using this product.
- This product is intended for use with potting soil or potting mixes.
- Do not operate this product while its cord is damaged, or if it malfunctions, or has been dropped.

USING THE SENSOR

STEP 1


Dig a hole to your desired depth.

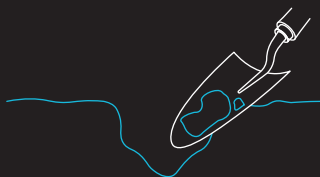

STEP 2

Remove the sensor cap and gently place the soil sensor into the hole (**DO NOT** force it).


Pack soil around the sensor to secure its placement.

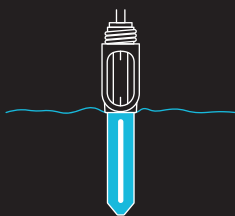

USING THE STEM


You may attach the stem to the sensor to bury it deeper within the soil, using the measurements along the sides to determine soil depth.

Feed the sensor cord through the stem, then twist the stem onto the sensor.

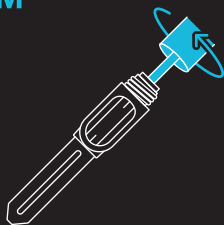


USING THE STEM

You may use the stem to slowly funnel water deeper into the soil. Make sure to cap the stem when not in use.

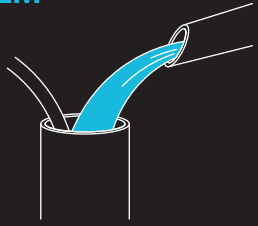

CONNECT TO YOUR CONTROLLER

 Plug your sensor into the first sensor port if no other sensors are plugged in.



Only one soil sensor may be used per controller at a time. Use sensor splitters (sold separately) to pair additional ones.

PROGRAMMING



Visit our website at www.acinfinity.com or refer to your controller's manual to learn how to program our controllers.

This soil sensor is only compatible with specific controller models. Please visit our website for more information.

To set up automations and alerts, download the app.



MORE INFORMATION

WARRANTY

WEBSITE | www.acinfinity.com

EMAIL | support@acinfinity.com

PHONE | 626-923-6399, 9 am to 5 pm PST

ADDRESS | 21880 BAKER PARKWAY
CITY OF INDUSTRY, CA 91789

DEALERS

EMAIL | dealers@acinfinity.com

PHONE | 626-838-4656, 9 am to 5 pm PST



MANUAL CODE SLS2412X1

COPYRIGHT © 2025 AC INFINITY INC. ALL RIGHTS RESERVED

No part of the materials including graphics or logos available in this booklet may be copied, photocopied, reproduced, translated or reduced to any electronic medium or machine readable form, in whole or in part, without specific permission from AC Infinity Inc.