

PRODUCT CONTENTS




UV HYDRO
BOTTLE (X1)



CHARGING
CABLE (X1)

PROGRAMMING

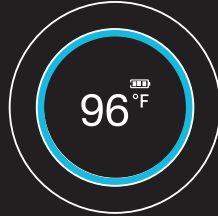

LIGHT INDICATORS

The indicator will change with temperature or function when the screen wakes up. Refer to the guide below.

LIGHT BLUE

Water temperature is between 0-96°F.

GREEN

Water temperature is between 98-140°F.

RED

Water temperature is between 141-210°F.

BLUE

Sterilization is in progress.

YELLOW

Timer alarm is triggered.

HYDRO BOTTLE

QUICK START GUIDE

AC INFINITY

SETTINGS

USING THE CAP

Touch the screen to wake it up.



ACTIVATING STERILIZATION

Tap and hold the screen for two seconds to activate the sterilization. A 180-second countdown will initiate and the indicator will flow blue.



SETTINGS

ACTIVATING THE TIMER ALARM

Touch the screen to wake it up. Tap the screen twice to activate the 90-minute timer alarm. A glass of water icon will appear to indicate this alarm is active.

After 90 minutes pass, the alarm will sound and the ring indicator will turn yellow to remind you to drink water. This alarm will sound off 4 times before deactivating.



USER NOTES

1. Removing the cap while sterilization is active will deactivate it automatically while the indicator flashes red.
2. Sterilization cannot start when the internal temperature exceeds 140°F.
3. The indicator will flash in red when the cap is charging. This will override all other indicators.
4. The detected temperature may read a few degrees higher than the actual temperature after sterilization concludes.
5. Because this product's cap contains precision components and waterproofing material that creates the vacuum seal, disassembly is not recommended.
6. Tapping the screen 8 times will change the temperature scale.