

AC INFINITY

# AIRTITAN SERIES

CRAWLSPACE AND BASEMENT VENTILATION FANS

USER MANUAL



## WELCOME

Thank you for choosing AC Infinity. We are committed to product quality and friendly customer service. If you have any questions or suggestions, please don't hesitate to [contact](#) us. Visit [www.acinfinity.com](http://www.acinfinity.com) and click contact for our contact information.

### EMAIL

[support@acinfinity.com](mailto:support@acinfinity.com)

### WEB

[www.acinfinity.com](http://www.acinfinity.com)

### LOCATION

Los Angeles, CA

## MANUAL CODE AT2208X3

### PRODUCT

AIRTITAN S3  
AIRTITAN S7  
AIRTITAN T3  
AIRTITAN T7  
AIRTITAN T8  
AIRTITAN T8-N

### MODEL

AC-ATS3  
AC-ATS7  
AC-ATT3  
AC-ATT7  
AC-ATT8  
AC-ATT8-N

### UPC-A

819137023727  
819137023734  
819137020467  
819137020474  
819137020481  
819137020498



EC models **CANNOT** be daisy chained with DC models. See pages 24-25 for more information on daisy-chaining fans and safety precautions.

# MANUAL INDEX

|                                  |         |
|----------------------------------|---------|
| Manual Index .....               | Page 5  |
| Product Warning .....            | Page 6  |
| Key Features .....               | Page 7  |
| Product Contents .....           | Page 8  |
| Changing Fan Direction .....     | Page 9  |
| Fan Mounting .....               | Page 11 |
| Powering and Setup .....         | Page 13 |
| Controller Mounting .....        | Page 17 |
| UIS™ Platform .....              | Page 22 |
| UIS™ Compatibility .....         | Page 23 |
| Compatibility .....              | Page 24 |
| Adding More Devices .....        | Page 25 |
| Programming .....                | Page 26 |
| Other Settings .....             | Page 45 |
| Download the App .....           | Page 46 |
| Add a Device .....               | Page 47 |
| FAQ .....                        | Page 50 |
| Other AC Infinity Products ..... | Page 55 |
| Warranty .....                   | Page 56 |

# PRODUCT WARNING



TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK, OR INJURY TO PERSONS,  
OBSERVE THE FOLLOWING:

1. Ensure your power source conforms to the electrical requirements of this product.
2. Check your local code restrictions for additional safety measures that may be needed for a proper code compliant installation.
3. Read all instructions before installing and using this product.
4. If you are unfamiliar or have doubts about performing this product's installation, seek the services of a qualified, trained, and licensed professional. Inappropriate installation will void this product's warranty.
5. Do not attempt to hardwire this product. Performing any retrofitting actions may result in personal injury and/or electrical damage, and will void this product's warranty.
6. This product must not be used in potentially hazardous locations such as flammable, explosive, chemical-laden, or wet atmospheres.
7. Ducted products must always be vented to outdoor areas.
8. Do not cover power cords with rugs or other fabric materials.
9. This product has rotating parts. Safety precautions should be exercised during the installation, operation, and maintenance of this product.
10. Do not insert or allow fingers or foreign objects to enter any ventilation or exhaust openings as it may cause electric shock, fire, or damage to this product. Do not block or tamper with this product in any manner while it is in operation.
11. Do not depend on the on/off programming as the sole means of shutting power from this product. Unplug the power cord before installing, servicing, or moving this product.
12. Do not operate this product while its cord is damaged, or if it malfunctions, has been dropped, or is damaged in any manner.

# KEY FEATURES

## HEAVY DUTY BUILD





Fans are specially sealed for high resistance to dust particles and liquids, including water splashes and high-pressure water jets.

## QUIET OPERATION

PWM-controlled motor provides precise speed control, reduced rotor noise, and runs on energy efficient EC motor.

## DUAL BALL BEARINGS

Each fan contains long-life ball bearings rated at 67,000 hours, enabling the fan to be mounted in any direction.

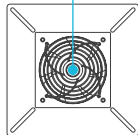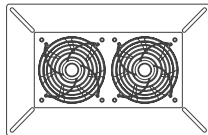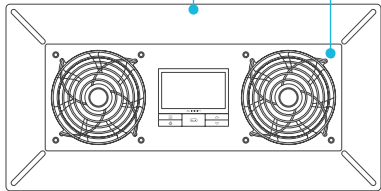

## SPEED CONTROLLER

Single button controller with circular readout display that enables fan speed control in ten speeds.

## SMART CONTROLLER


Features automation controls that activate the fan according to temperature, humidity, timer, and schedules.

## THERMAL PROBE

The 12-foot corded sensor probe is constructed of stainless steel and ensures precise temperature and humidity readings.

# PRODUCT CONTENTS

## AIRTITAN T8 and AIRTITAN T8-N



FAN  
SYSTEM  
(x1)



SENSOR  
PROBE  
(x1)

## AIRTITAN S3 and S7



FAN  
SYSTEM  
(x1)



SPEED  
CONTROLLER  
(x1)



UIS EXTENSION  
CORD (M-M)  
(x1)



WOOD SCREWS  
(WALL HANG)  
(x1)

## AIRTITAN T3 and T7



FAN  
SYSTEM  
(x1)



SMART  
CONTROLLER  
(x1)



SENSOR  
PROBE  
(x1)



WOOD SCREWS  
(WALL HANG)  
(x2)



UIS EXTENSION  
CORD (M-M)  
(x1)

## ALL MODELS



WOOD SCREWS  
(PLATE MOUNTING)  
(x4)



WALL  
ANCHORS  
(x4)



MACHINE  
SCREWS  
(x4)



WIRE  
TIE  
(x1)




# CHANGING FAN DIRECTION

## AIRTITAN S3/S7 and T3/T7

### STEP 1

Unplug the unit before flipping the internal fan, and double check to make sure that it is completely unpowered.

Remove the front and back screws using a Phillips screwdriver to separate the internal fan from the fan shell and front plate.

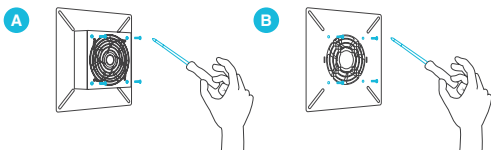


AIRTITAN S3/T3 illustration shown above.

### STEP 2

Identify the airflow direction to achieve your desired configuration; airflow will blow on the label side.

Take out the fan and flip it over. When placed back in the shell, position the power cord SR to the shell slot to secure the cord.

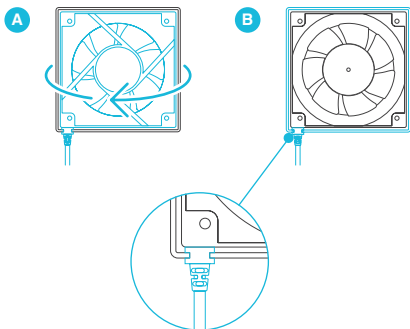


AIRTITAN S3/T3 illustration shown above.

# CHANGING FAN DIRECTION

## AIRTITAN S3/S7 and T3/T7

### STEP 3

Reapply the screws to secure the shell and back plate to reassemble the fan.

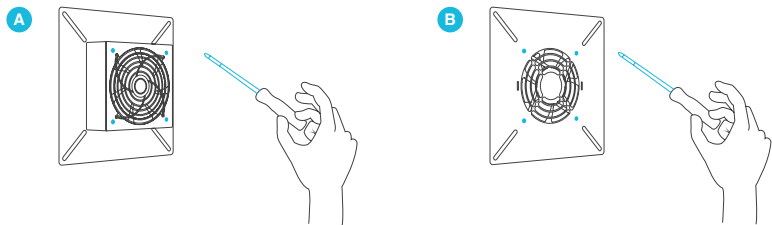


AIRTITAN S3/T3 illustration shown above.

**NOTE: For AIRTITAN T8 Series, we offer both intake and exhaust configurations.**

# FAN MOUNTING

## STEP 1


Remove any existing grilles, vents, or covers on ventilation opening where you wish to install the fan unit.

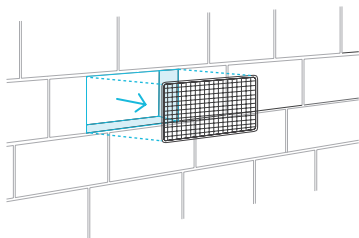

---

## STEP 2


Position the fan unit over the ventilation opening. Depending on the model, the unit may be facing towards or away from the wall. Please be sure to check the airflow direction prior to installation.

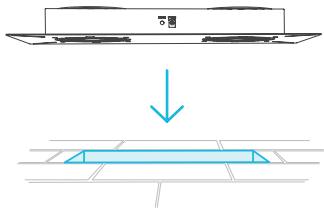

# FAN MOUNTING

## STEP 3 (Foundation Block Mounting)


To install the unit onto a foundation brick or block, mark the mounting hole locations using the four corners of the metal face plate. Then drill 5/16" holes with a drill bit. Install wall anchors into openings and secure the unit into the wall with four screws.

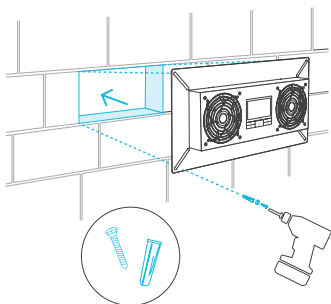

AIRTITAN T8/T8N Illustration shown above.

## STEP 3 (Wall and Surface Mounting)

Secure the mounting frame onto the surface with the included wood screws. If using a machine screw with nuts, you may need to drill a hole.

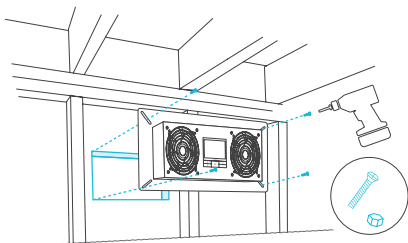


AIRTITAN T8/T8N Illustration shown above.

# POWERING AND SETUP

## AIRTITAN S3/S7

### STEP 1


Use the included UIS M-M extension cord to connect the fan's EC Motor box to the S-Series controller.



---

### STEP 2

Plug the fan's power cord into an AC power outlet to power it and the controller.

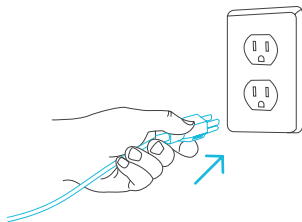


# POWERING AND SETUP

## AIRTITAN T3/T7

### STEP 1


Use the included UIS M-M extension cord to connect the fan's EC Motor box to one of the controller's ports.



### STEP 2

Plug the sensor probe into the controller's 3.5mm jack. Route the probe head to spot areas as needed.

Keep the probe cord away from your HID\* grow light ballast's power cord to ensure the controller properly detects climate conditions.

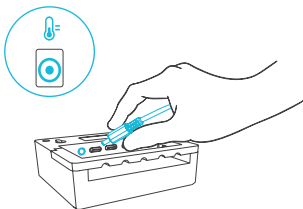


\*MH, HPS, CMH, or CHPS

# POWERING AND SETUP

## AIRTITAN T3/T7

### STEP 3

Plug the fan's power cord into an AC power outlet to power it and the controller.

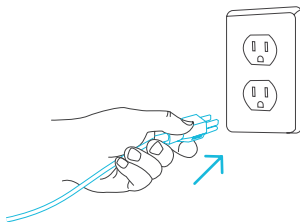


---

### STEP 4

You may use the included tie mounts and wire ties to manage the cords.

Secure the tie mounts onto a surface. Loop the wire ties around the cords into the tie mounts.

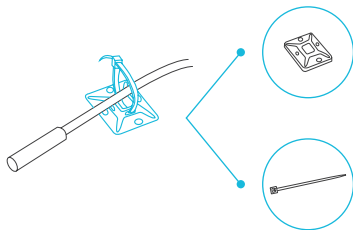


# POWERING AND SETUP

## AIRTITAN T8/T8-N

### STEP 1


To set up temperature monitoring, plug the male connector of the thermal probe into the designated probe port located at the bottom side of the fan unit.

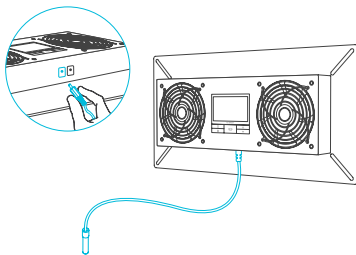

---

### STEP 2

Plug the fan's power cord into an AC power outlet to power it.

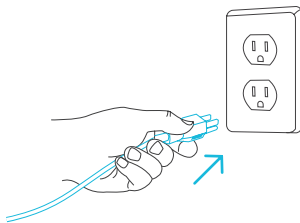




# CONTROLLER MOUNTING

## AIRTITAN S3/S7

### STEP 1 — WALL MOUNTING


Locate a spot free of obstruction and secure the anchor into your wall. Twist the wood screw into the anchors.

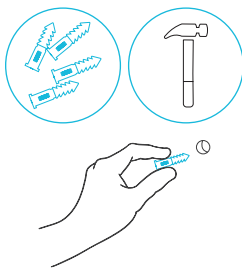

---

### STEP 2 — WALL MOUNTING

Hang the controller by the screw using the hole on the backside.

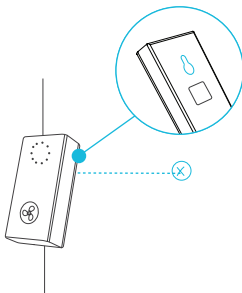


# CONTROLLER MOUNTING

## AIRTITAN S3/S7

### MAGNET MOUNTING

Mount the controller on a steel surface using the magnet located behind the label.

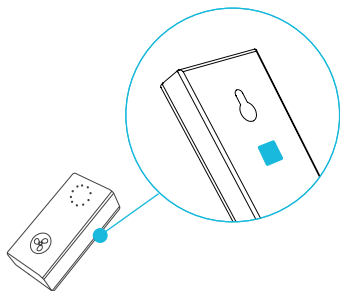


# CONTROLLER MOUNTING

## AIRTITAN T3/T7

### STEP 1 — WALL MOUNTING


Locate a spot free of obstruction and secure the anchors into your wall. Twist the wood screws into the anchors.

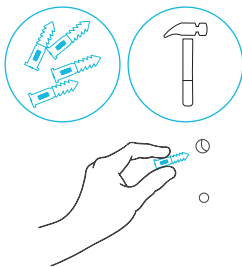

---

### STEP 2 — WALL MOUNTING

Hang the controller by the screws using the holes on the backside.

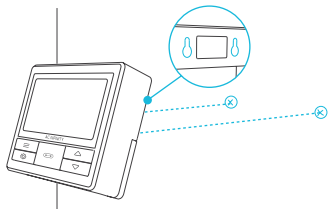


# CONTROLLER MOUNTING

## AIRTITAN T3/T7

### MAGNET MOUNTING


You may also mount the controller onto a steel surface using the magnet located behind the label.

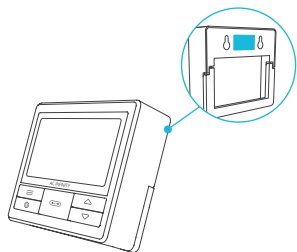

---

### CORD ARRANGEMENT

Cords may be routed into or outside of the kickstand grooves, and through a cut hole behind the controller.

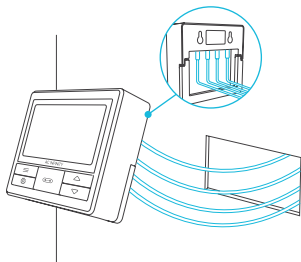


# CONTROLLER MOUNTING

## AIRTITAN T3/T7

### KICKSTANDING

Open the stand behind the controller to set it tilted on your desktop.

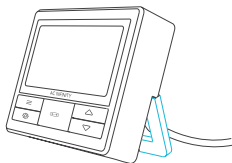


# UIS™ PLATFORM

The UIS™ platform enables you to connect a single central controller with several grow devices simultaneously. By creating this fully integrated system, you can power and program all your devices together or separately for optimized grow tent management.

Use select smart controllers to set triggers that will activate your devices based on your grow tent's temperature and humidity. Create independent timers and schedules for customized activation in your desired timeframe.

Your grow system can be regulated using your controller hub or remotely on the AC Infinity app (paired with compatible controllers), where you will have access to automation programming and climate data.

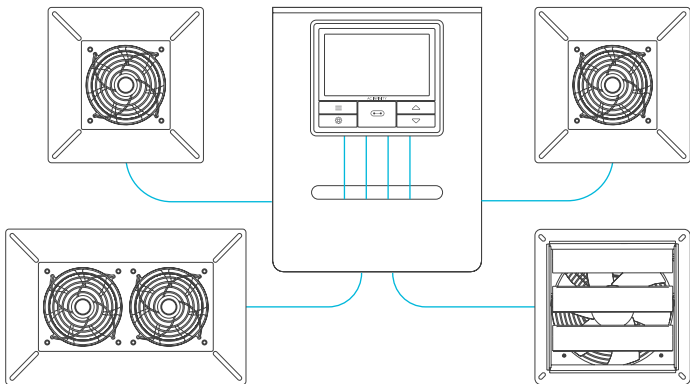


**Central controllers, mounting plate, and grow devices will be sold separately and may still be in development at the time of your purchase of this product.**


# UIS™ COMPATIBILITY

## MOLEX ADAPTER

Use the included Molex adapter to plug inline fans with 4-pin Molex connectors into this controller. Plug your fan's Molex connector into the adapter. Then plug the adapter into the controller.




UIS M - 4PIN F  
ADAPTER

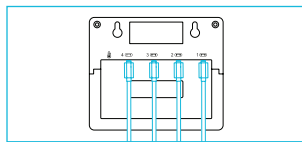


## EXTENSION CABLE\*

Use male-to-male UIS extension cords to connect devices with female UIS ports at an extended range from your controller.




UIS M - M  
CORD




UIS M - M  
CLIP FAN CORD

## EXPANSION DONGLE\*

The expansion dongle will allow you to connect 2 or 4 devices with a single port and can support additional dongles to create more expansion ports (up to 64 units supported with the use of 20 dongles). Intended for exclusive use with AC Infinity controllers built with UIS ports.



UIS M - F  
2 PORT DONGLE




UIS M - F  
4 PORT DONGLE


\*Not included

# COMPATIBILITY

The AIRTITAN T-Series includes the CONTROLLER 69, which is compatible with AC Infinity fan models that contain EC-motors. An AIRTITAN fan that uses an EC-motor will use a power brick while one that does not use an EC-motor will lack a power brick. Note that certain models that previously used DC-motors now contain EC-motors in updated builds.

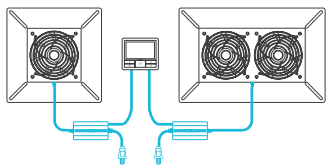

**EC Motor - Compatible**


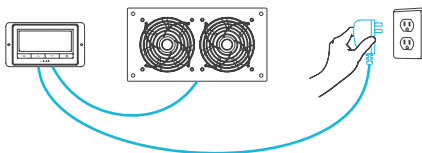


**AC or DC - NOT Compatible**



# ADDING MORE DEVICES

The CONTROLLER 69 is built with four ports that enable you to power and control multiple devices at the same time. See images below for a sample configuration.

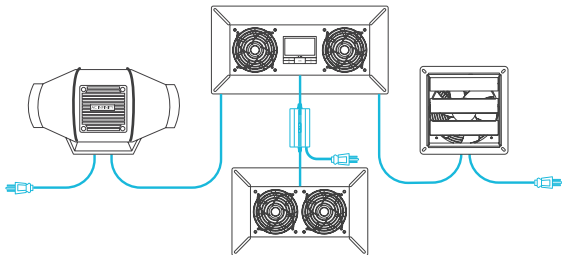
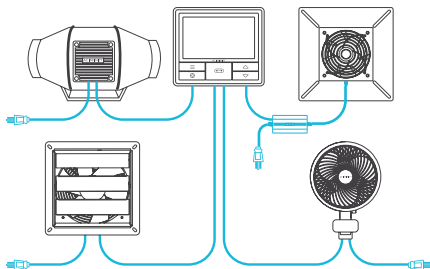


# PROGRAMMING

## S-SERIES

### FAN SPEED ADJUSTING


The controller features a single button that controls the fan speed from 0-10. Pressing the speed button increases the fan speed in one unit increments. Pressing the button at the 10 setting will set the fan speed back to 0.

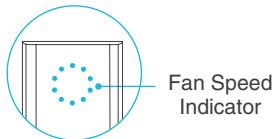

---

### POWERING ON/OFF

Holding the speed button for 4 seconds will turn the fan OFF. Pressing it again from OFF will turn the fan ON at its last speed setting.

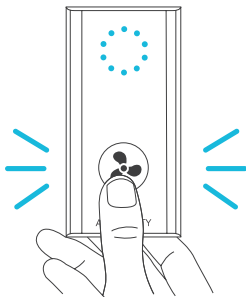

# PROGRAMMING

## T-SERIES

AIRTITAN T8/T8N Screen Display, and CONTROLLER 69 Display

### 1. PORT BUTTON

Cycles through up to four connected devices. Each device is programmed independently, or together when navigating to ALL.

### 4. UP/DOWN BUTTONS

Adjusts the value of your current mode. The up button increases and down button decreases the setting. Hold both to reset values to OFF/Default.

### 6. PROBE TEMP.

Displays the current temperature that the probe is detecting. Shows "--" if no probe is plugged in. Includes a trend indicator that signals a rise, stability, or fall in temperature within the last hour.

### 8. CONTROLLER MODE


Displays the controller's current mode. Pressing the mode button cycles through the available modes.

### 11. CURRENT LEVEL

Displays the connected devices' current setting. Includes a trend indicator that signals if the setting is currently rising, falling, or holding steady.

### 2. MODE BUTTON

Cycles through the controller's modes: OFF, ON, AUTO (4 triggers), TIMER to ON, TIMER to OFF, CYCLE (ON and OFF), and SCHEDULE (ON and OFF).

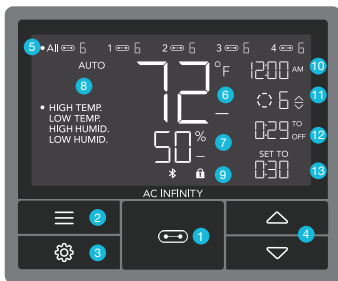

### 9. ALERT ICONS

Displays alerts and statuses of the controller, including the controller lock, CLIMATE alert, and TIMER alert.

### 12. COUNTDOWN

Displays the countdown of the TIMER TO ON, TIMER TO OFF, CYCLE, or SCHEDULE mode activates or deactivates the devices. TO ON shows the amount of time left before the devices turn on. TO OFF shows the amount of time left before the device turn off.

### 3. SETTING BUTTON

Cycles through the controller's settings: DISPLAY, CLOCK, °F/°C, CALIB. T°/H%, and TRANS.T°/H%.

### 5. PORTS

Displays all connected devices as well as their current level. Digits are displayed by the UIS symbol when a device is plugged into its corresponding port.

### 7. PROBE HUMIDITY

Displays the current humidity that the probe is measuring. Shows "--" if no probe is plugged in. Includes a trend indicator that signals a rise, stability, or fall in humidity within the last hour.

### 10. CURRENT TIME

Displays the current time. The internal battery sustains the clock so it does not default to 00:00 if power is cut off.

### 13. USER SETTING

Displays the value of your current mode. Use the up or down buttons to adjust the value.

# PROGRAMMING

## T-SERIES


### PORTS

Pressing the port button will cycle through the controller's available ports: ALL, 1, 2, 3, and 4. Dot indicates the current device. No digit is displayed if a device is not plugged into the corresponding port.

### ALL PORTS

Navigate to the ALL port to set simultaneous programming for all connected devices.

Programming set in this port mode applies to all connected devices, but will not be active if you navigate to other ports. Re-entering the ALL port will resume its programming.

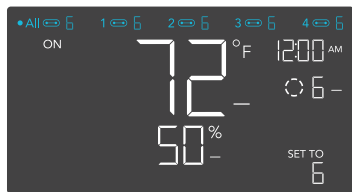

### INDIVIDUAL PORT

Navigate to a numbered port with a connected device to set individual programming.

Programming will run in the background even while you navigate to other numbered ports.



# PROGRAMMING

## T-SERIES

### CONTROLLER MODES

Pressing the mode button will cycle through the controller's available programming modes: OFF, ON, AUTO (4 triggers), TIMER TO ON, TIMER TO OFF, CYCLE (On and Off), and SCHEDULE (On and Off).

#### OFF MODE

Your devices will not run while in this mode. The OFF Mode setting also serves as the minimum level the other modes will run at while triggered OFF.



#### MINIMUM LEVEL

Your devices will run at the level set in OFF Mode, as the minimum level, when triggered to turn OFF. These other modes include the AUTO Mode, CYCLE Mode, TIMER TO ON Mode, TIMER TO OFF Mode, and SCHEDULE Mode.

They will run continuously until triggered ON, at which point they will run at the level set in ON Mode.



\*Example shown

If you want your devices to turn off completely when they're triggered to be OFF, set the OFF Mode level to zero.




# PROGRAMMING

## T-SERIES

### ON MODE

Your devices will actively run at the level set here, regardless of the probe's reading. The ON Mode setting also serves as the maximum level the other modes will run at.

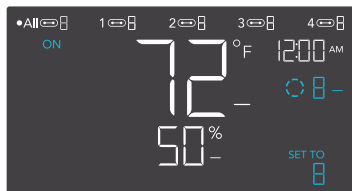

\*Example shown

### MAXIMUM LEVEL

Your devices will run at the level set in ON Mode, as the maximum level, when triggered ON, as well as in the AUTO Mode, CYCLE Mode, TIMER TO ON Mode, TIMER TO OFF Mode, and SCHEDULE Mode.

Do not set the ON Mode figure to zero or your device will turn off when it's triggered ON in all modes.



# PROGRAMMING

## T-SERIES


### AUTO MODE (HIGH TEMPERATURE TRIGGER)

Pressing the up or down button sets the high temperature trigger. The devices will activate if the probe's reading meets or exceeds this threshold.



Once triggered, the devices will gradually ramp up to the level set in ON mode. If the probe's reading falls below this trigger point, the devices will gradually slow down to a stop or at the level set in OFF mode.

You may set this trigger below the low temperature trigger to create a specific range in which the devices are active.

This is typically used with devices like air conditioners and cooling fans to help lower the temperature when it gets too hot. For example, if you set a high temperature trigger of 90°F, then your device will activate when the temperature reaches 90°F or higher, and turn off when it falls below 90°F. Products shown here may still be in development.

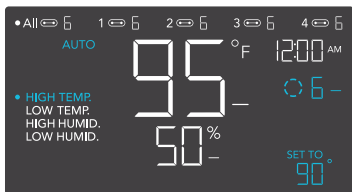

Any of the four trigger points can activate while you are in AUTO Mode, even if you are viewing another trigger point. Please set a trigger point to OFF if not in use, by holding down the up and down button. If there is a level set in OFF Mode other than zero, the devices will run at that level when triggered to turn off.

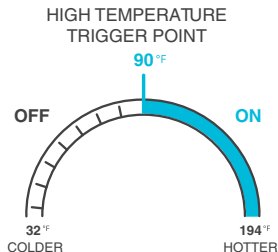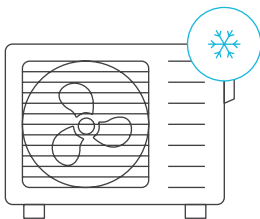

# PROGRAMMING

## T-SERIES


### AUTO MODE (LOW TEMPERATURE TRIGGER)

Pressing the up or down button sets the low temperature trigger. The devices will activate if the probe's reading meets or falls below this threshold.



Once triggered, the devices will gradually ramp up to the level set in ON mode. If the probe's reading rises above this trigger point, the devices will gradually slow down to a stop or at the level set in OFF mode.

You may set this trigger above the high temperature trigger to create a specific range in which the devices are active.

This is typically used with devices like heaters and seedling mats to help raise the temperature when it gets too cold. For example, if you set a low temperature trigger of 40°F, then your device will activate when the temperature falls to 40°F or lower, and turn off when it rises above 40°F. Products shown here may still be in development.

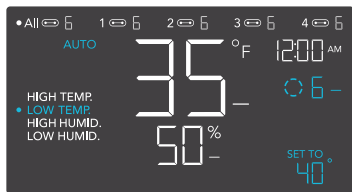

Any of the four trigger points can activate while you are in AUTO Mode, even if you are viewing another trigger point. Please set a trigger point to OFF if not in use, by holding down the up and down button. If there is a level set in OFF Mode other than zero, the devices will run at that level when triggered to turn off.

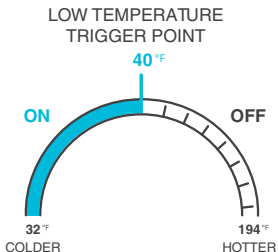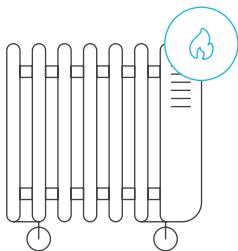



# PROGRAMMING

## T-SERIES


### AUTO MODE (HIGH HUMIDITY TRIGGER)

Pressing the up or down button sets the high humidity trigger. The devices will activate if the probe's reading meets or exceeds this threshold.



Once triggered, the devices will gradually ramp up to the level set in ON mode. If the probe's reading falls below this trigger point, the devices will gradually slow down to a stop or at the level set in OFF mode.

You may set this trigger below the low humidity trigger to create a specific range in which the devices are active.

This is typically used with devices like dehumidifiers to help lower the humidity when it gets too humid. For example, if you set a high humidity trigger of 70%, then your device will activate when the humidity rises to 70% or higher, and turn off when it falls below 70%. Products shown here may still be in development.

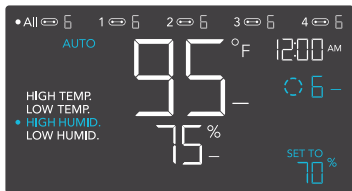

Any of the four trigger points can activate while you are in AUTO Mode, even if you are viewing another trigger point. Please set a trigger point to OFF if not in use, by holding down the up and down button. If there is a level set in OFF Mode other than zero, the devices will run at that level when triggered to turn off.

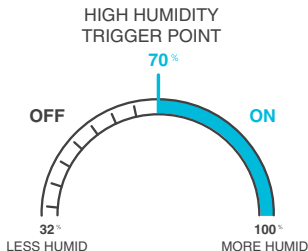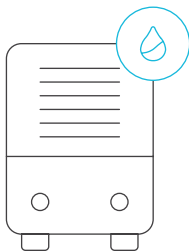

# PROGRAMMING

## T-SERIES


### AUTO MODE (LOW HUMIDITY TRIGGER)

Pressing the up or down button sets the low humidity trigger. The devices will activate if the probe's reading meets or falls below this threshold.



Once triggered, the devices will gradually ramp up to the level set in ON mode. If the probe's reading rises above this trigger point, the devices will gradually slow down to a stop or at the level set in OFF Mode.

You may set this trigger above the high humidity trigger to create a range in which the devices are active.

This is typically used with devices like humidifiers to help raise the humidity when it gets too dry. For example, if you set a low humidity trigger of 50%, then your device will activate when the humidity falls to 50% or lower, and turn off when it rises above 50%. Products shown here may still be in development.

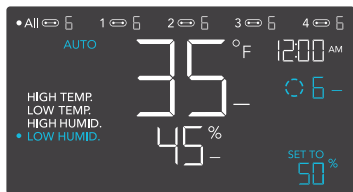

Any of the four trigger points can activate while you are in AUTO Mode, even if you are viewing another trigger point. Please set a trigger point to OFF if not in use, by holding down the up and down button. If there is a level set in OFF Mode other than zero, the devices will run at that level when triggered to turn off.

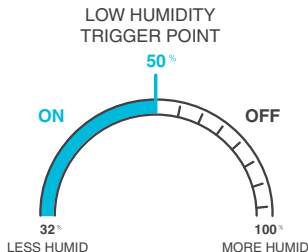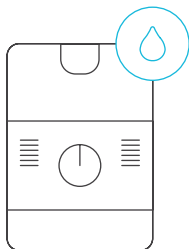

# PROGRAMMING

## T-SERIES


### TIMER TO ON MODE

Pressing the up or down button sets a countdown time. During the countdown, your device will be set to OFF. Once the timer ends, your device will trigger to turn on. If there is a level set in OFF Mode, the devices will run at that level during the countdown and when triggered to turn off.

The countdown will begin if no buttons are pressed for 5 seconds. The time left on the countdown is shown on the lower right corner of the display above the setting. Leaving the timer mode while the countdown is running will pause it until you return to this mode.




TIMER TO ON  
(COUNTDOWN END POINT)

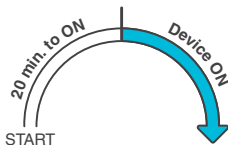


### TIMER TO OFF MODE

Pressing the up or down button sets a countdown time. During the countdown, your device will be set to ON. Once the timer ends, your device will trigger to turn off. If there is a level set in OFF Mode, the devices will run at that level after the end of the countdown.

The countdown will begin if no buttons are pressed for 5 seconds. The time left on the countdown is shown on the lower right corner of the display above the setting. Leaving the timer mode while the countdown is running will pause it until you return to this mode.

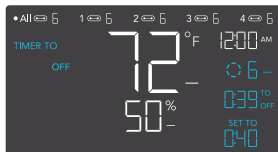

TIMER TO OFF  
(COUNTDOWN END POINT)

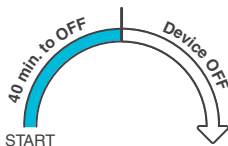

# PROGRAMMING


## T-SERIES

### CYCLE MODE (ON AND OFF)



Set an on duration and an off duration for the devices to cycle through continuously. Press the up or down button to first set a duration for the devices to activate. Then press the mode button again and set a duration for the devices to deactivate.

When the devices are activated, they will run at the level set in ON Mode. When the devices are deactivated, they will run at the level set in OFF Mode.

The countdown will begin if no buttons are pressed for 5 seconds. The time left on the countdown before the next ON or OFF phase is displayed below the current level. Leaving the cycle mode while the countdown is running will pause it until you return to this mode.

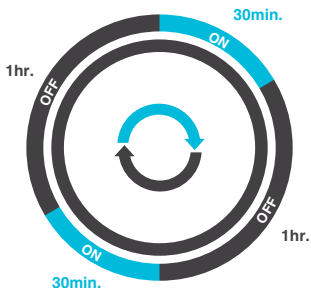

If there is a level set in OFF Mode other than zero, the devices will run at that level when triggered to turn off.

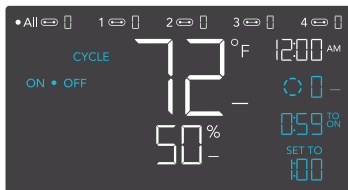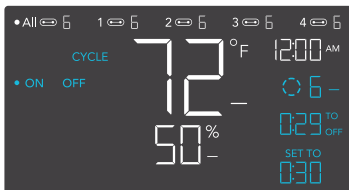

# PROGRAMMING



## T-SERIES

### SCHEDULE MODE (ON AND OFF)



Sets an on clock-time and an off clock-time schedule for the devices to follow daily. Press the up or down button to first set up an on clock-time to trigger ON mode, then press the mode button to set an off clock-time to trigger OFF mode. Please be sure to set the current clock time under settings.

When the devices are triggered to activate, they will run at the level set in ON Mode. When the devices are triggered to deactivate, they will run at the level set in OFF Mode.

The countdown will begin if no buttons are pressed for 5 seconds. The time left on the countdown before the next on or off phase is displayed below the current level. The devices will not follow this schedule if you leave this mode. If you re-enter the Schedule Mode, they will continue to follow the latest schedule you have set.

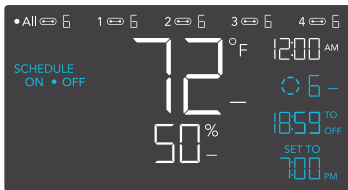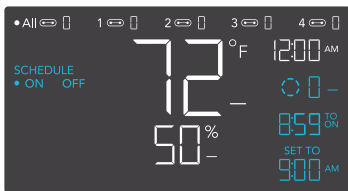

If there is a level set in OFF Mode other than zero, the devices will run at that level when triggered to turn off.

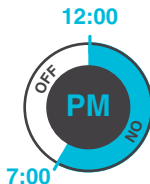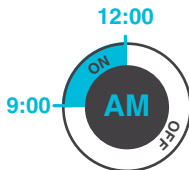

# PROGRAMMING

## T-SERIES

### CONTROLLER SETTINGS

Pressing the setting button will cycle through the controller's available settings: DISPLAY, °F/°C, CLOCK, CALIB. T°, CALIB. H%, TRANS. T°, and TRANS. H%.

#### DISPLAY SETTING

Adjusts the display brightness and auto-dimming. Press the up or down button to cycle through levels 1, 2, 3, A2 and A3; 3 being the highest brightness setting, while 1 is the lowest. In settings 1, 2 and 3, the display will stay at that brightness level and will not automatically dim the display.

A2 and A3 will set the brightness level at 2 and 3, respectively, and will dim down the brightness to level 1 when the controller is not being used after 15 seconds.




#### TOGGLING THE DISPLAY

Lock the controller by holding the setting button.

Press the setting button to turn the display off. Pressing the setting button again will turn the display back on.

Programs will still run in the background while the LCD screen is off.

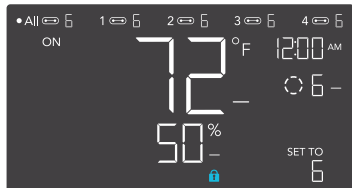


# PROGRAMMING

## T-SERIES

### °F/°C SETTING


Changes the displayed units to Fahrenheit or Celsius. Press the up or down button to cycle through F and C. All displayed units will automatically convert when adjusting this setting.

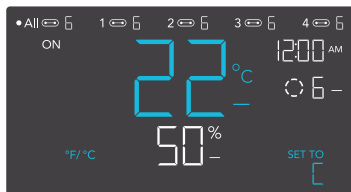

---

### CLOCK SETTING

Adjusts the current clock time. Press the up or down button to increase or decrease the time. Once you cycle through 12:00 each time, the units will automatically change to AM or PM. The clock time is located at the top right corner of the display.

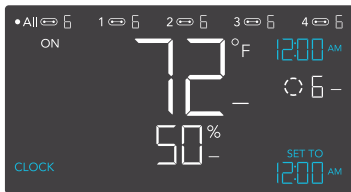


# PROGRAMMING

## T-SERIES


### CALIBRATION TEMPERATURE SETTING

Adjusts the temperature reading the sensor probe is measuring. Press the up or down button to increase or decrease the data figure in 2°F (or 1°C) increments. The calibration cycle ranges from -20°F to 20°F (or -10°C to 10°C) and will be applied to the sensor probe's measurements.

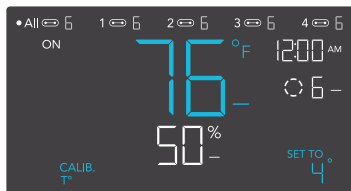

### CALIBRATION HUMIDITY SETTING

Adjusts the relative humidity reading the sensor probe is measuring. Press the up or down button to increase or decrease the data figure in 1% increments. The calibration cycle ranges from -10% to 10% and will be applied to the sensor probe's measurements.

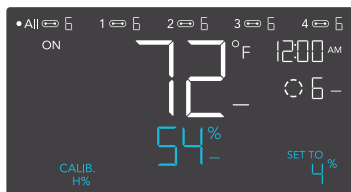



# PROGRAMMING

## T-SERIES

### TRANSITION TEMPERATURE SETTING



Adjusts how gradually your device will shift between levels when triggered ON by the AUTO Mode's temperature trigger. This will determine how much the probe temperature needs to increase to step up to the next level setting.

The higher the transition setting is, the wider the temperature gap is between levels. The lower the transition setting is, the smaller the temperature gap is between levels. If this figure is set to zero, your device will jump to your maximum level when triggered ON.

Press the up or down button to set a transition threshold between 0°F and 20°F (0°C and 10°C). When the sensor temperature first reaches or exceeds the high temperature trigger point, the level will increase by one (exiting OFF Mode). Each time the threshold level is crossed, the level will ramp up by one until it reaches the level set in ON Mode.

### EXAMPLE

In this example, your high temperature trigger is set at 80°F, the OFF Mode level is 0, and the ON Mode level is 6. If the transition threshold is set to 0°F, then once the sensor temperature reaches or exceeds 80°F, then the devices will trigger to run at level 6. However, if the transition threshold is set to 2°F, then the devices will trigger to run at level 1 when the temperature reaches or exceeds 80°F. It will then ramp up to level 2 when the temperature reaches or exceeds 82°F, level 3 at 84°F, level 4 at 86°F, etc. From 90°F on, it will run at level 6, the level set in ON Mode.

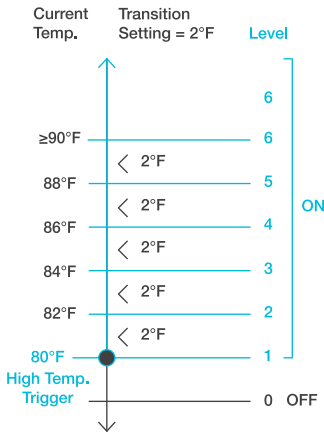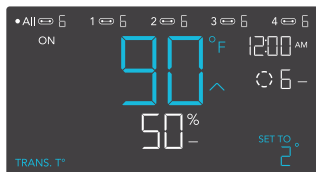

# PROGRAMMING

## T-SERIES

### TRANSITION HUMIDITY SETTING



Adjusts how gradually your device will shift between levels when triggered ON by the AUTO Mode's humidity trigger. This will determine how much the probe humidity needs to increase to step up to the next level setting.

The higher the transition setting is, the wider the humidity gap is between levels. The lower the transition setting is, the smaller the humidity gap is between levels. If this figure is set to zero, your device will jump to your maximum level when triggered ON.

Press the up or down button to set a transition threshold between 0% and 10%. When the sensor humidity first reaches or exceeds the high humidity trigger point, the level will increase by one (exiting OFF Mode). Each time the threshold level is crossed, the level will ramp up by one until it reaches the level set in ON Mode.

### EXAMPLE

In this example, your high humidity trigger is set at 70%, the OFF Mode level is 0, and the ON Mode level is 6. If the transition threshold is set to 0%, then once the sensor humidity reaches or exceeds 70% then the devices will trigger to run at level 7. However, if the transition threshold is set to 2%, then the fan will trigger to run at level 1 when it reaches or exceeds 70%. It will then step up to level 2 when reaching or exceeding 72%, level 3 at 74%, and level 4 at 76%, etc. From 80% on, it will run at level 6, the level set in ON Mode.

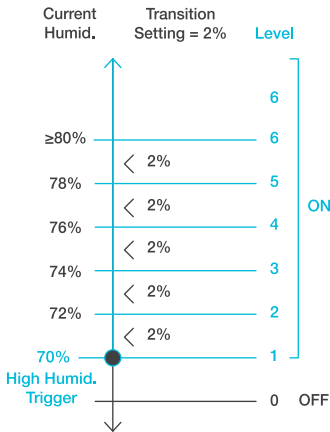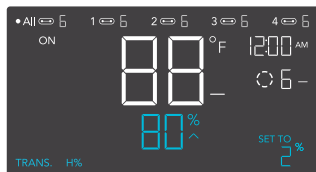


# PROGRAMMING

## T-SERIES

### ALERT ICONS

The alert icons are displayed at the top of the screen. Icons may flash when the controller signals an alert to notify you of any triggered function or alarm.

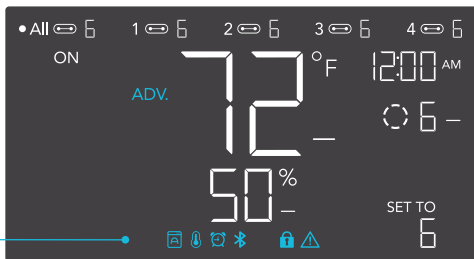

#### ADVANCE PROGRAMMING

Displays when an advance program set in the app is active. "ADV." will appear and override the controller if an automation program is in use.



#### AUTO MODE ALERT

Flashes whenever any of the auto mode triggers (high temperature, low temperature, high humidity, or low humidity) activate your devices.




#### TIMER ALERT

Flashes when a countdown has completed for TIMER TO ON, TIMER TO OFF, CYCLE, or SCHEDULE Mode.

# PROGRAMMING

## T-SERIES

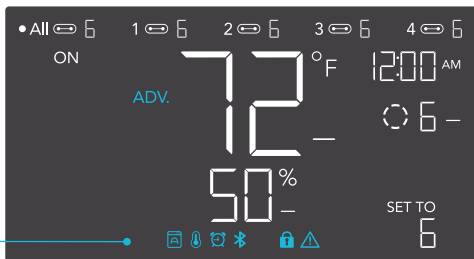

### BLUETOOTH

Appears when the physical controller is connected to the app via Bluetooth.



### DISPLAY LOCK ALERT

Displays when you lock the controller. The icon will flash and beep if you attempt to adjust the controller while it is still locked.



### TEMPERATURE/ HUMIDITY ALARM

Flashes and beeps with alarm if the temperature/ humidity meet the trigger point set in the app.

# OTHER SETTINGS

## T-SERIES

### FACTORY RESET

Holding the mode, up, and down buttons together for 5 seconds will reset your controller and restore factory settings. This clears all user parameters in each controller mode and setting.



### CONTROLLER LOCK

Holding the setting button will lock the controller in your current mode. While your controller is locked, no parameters may be adjusted, nor will you be able to switch modes. Holding the setting button again will unlock the controller.



### HIDE SCREEN

Lock the controller so no settings can be adjusted. See above. Then press the setting button to turn the display off. Pressing it again will turn the display back on. Programs will still run in the background while the LCD screen is off.



### JUMP TO OFF MODE

Holding the mode button for 3 seconds while in any mode or setting will automatically jump to OFF Mode. This function is disabled if the controller is locked.



### RESET TO OFF/DEFAULT

Holding the up and down buttons together for 2 seconds will reset the value of your current mode or controller setting to OFF/Default. Pressing either the up or down button will return to the previous value.



### AUTO INCREASING OR DECREASING

Holding the up or down button will increase or decrease the user setting automatically until you release them.



# DOWNLOAD THE APP

## THE AC INFINITY APP

The AC Infinity app enables you to connect with the next generation of our intelligent controllers, giving you access to advance programs and environmental data.

1

Download the AC Infinity app from the App Store or Play Store by searching “AC Infinity”.



2

Open the AC Infinity app and follow the instructions on page 47-49 to pair your controller with the app.



---

## QUICK TIP FOR EASY ACCESS

Open the smart phone camera and scan the QR code below to download the AC Infinity app. Please visit our website at [www.acinfinity.com](http://www.acinfinity.com) for more information on the AC Infinity app.



Please note: The AC Infinity App's appearance and features are subject to change, and please refer to our website/QR for the latest instructions.


# ADD A DEVICE

## SETUP AND PAIRING

Power your device on before pairing your device with the app. Refer to pages 14-16 for more information regarding controller setup.


1

Tap on the "+" tab to add your smart device.

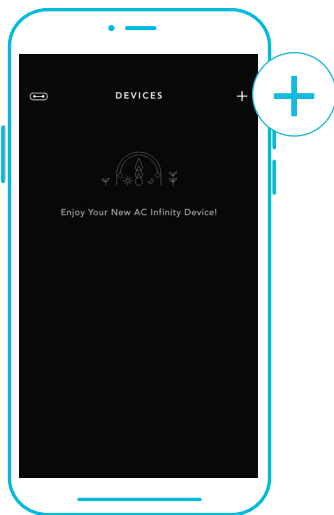

2

To launch the app, tap on the "Smart Controllers" tab to begin pairing.

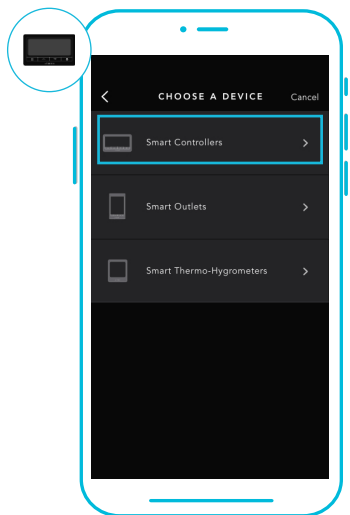


Please note: Bluetooth must be enabled on your mobile device before starting the pairing process.

# ADD A DEVICE


3

Select CONTROLLER 69 to begin pairing.

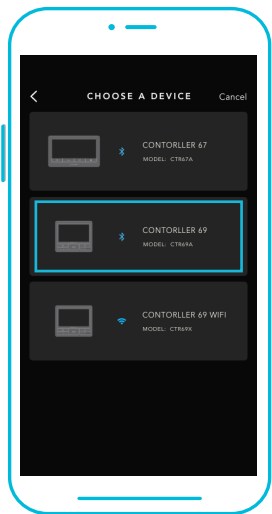

4

Hold the port button for 5 seconds to activate Bluetooth. Wait for the Bluetooth icon to start flashing on your controller's screen.

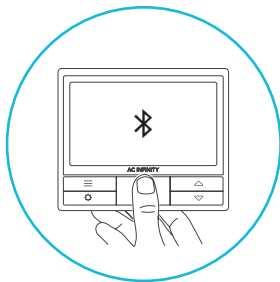




# ADD A DEVICE


5

Tap DONE button to complete the pairing process.

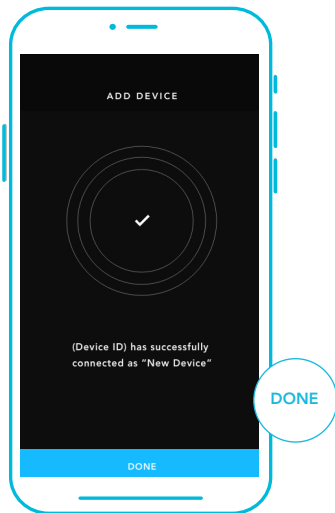

6

Your controller will appear in your smart device with a unique ID.

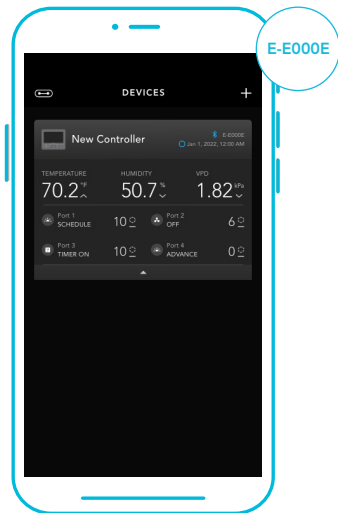

Please note: When pairing the app around multiple controllers, move your mobile device closer to your desired controller.

# CONTROLLER 69 FAQ

**Q:** What devices are compatible with the CONTROLLER 69?

**A:** All AC Infinity devices that contain a UIS connector are compatible. If your AC Infinity device has a 4-pin Molex connector and an EC-Motor, it may still be compatible with the use of an UIS adapter to convert its connector to fit with the controller.

---

**Q:** What does “level” refer to in the controller and app?

**A:** The level represents the intensity the device is running at. This is represented by a digit 0 to 10. Zero means the device is off, and 10 represents its running at its maximum. For fan devices, the level would be referring to its speed. For light devices, the level would be referring to its brightness. Note that on and off devices do not have a level setting.

---

**Q:** Why is my device is not turning off when the programming is triggering it to be off?

**A:** The figure set in OFF Mode determines the device’s level when it’s triggered to be OFF in all other modes. Set this figure to zero if you want the device to turn off when triggered OFF.

If this is occurring in AUTO Mode, check the points of your high and low triggers, which can all activate concurrently. Turn off any triggers that are not in use. If you are using the app, check to see if any ADVANCE programming is active, which can override any control programming.

---

**Q:** Why does my device not run or run at low levels when the programming is triggering it to be on?

**A:** The figure set in ON Mode determines the device’s level when it’s triggered to be ON in all other modes. Make sure this figure is not set to zero or the device will not run when triggered to be ON.

If this is occurring in AUTO Mode, check the points of your high and low triggers, which can all activate concurrently. Turn off any triggers that are not in use. If you are using the app, check to see if any ADVANCE programming is active, which can override any control programming.

# CONTROLLER 69 FAQ

**Q:** How do I stop my device from turning on and off too quickly in AUTO MODE?

**A:** The figure set in the TRANSITION under SETTINGS will determine how the device ramps up in levels when triggered to run in AUTO MODE. Set a transition threshold X. For every multiple of X that has surpassed your trigger point, the device will increase by one level. The lower the transition threshold is set to, the easier it will be for the device to ramp up in levels. If set to zero, the device will jump to the max set speed without ramping when triggered. This may cause the device to turn on and off quickly if the climate fluctuates back and forth. Increase the transition threshold number to help smooth out the transitions. Check the points of your high and low triggers, which can all activate concurrently. Turn off any triggers that are not in use.

---

**Q:** How do I set a minimum speed for constant ventilation, that would ramp up when triggered?

**A:** If a fan device is connected, the figure set in OFF MODE determines the fan speed when it's triggered to be OFF in all other modes. When the fan isn't triggered ON, it will be considered OFF and so it will run at that minimum speed continuously. Once triggered ON, it will change its speed to the figure set under ON MODE.

---

**Q:** Where is the best place to position the sensor probe?

**A:** Place the sensor probe as close as possible to the hottest or most humid spot in your space.

---

**Q:** Do I need to remove the plastic cap from the probe?

**A:** Yes. You will need to remove the plastic cap so the probe can accurately read climate conditions.

---

**Q:** Can I connect different sized fans to the same controller?

**A:** Please refer to page 24-25 for details on adding more fan units.

# CONTROLLER 69 FAQ

**Q:** Will I be able to use this controller with my own fan?

**A:** The CONTROLLER 69 is only compatible with AC Infinity fans that use EC-motors.

---

**Q:** Does the controller retain its settings after power is shut off?

**A:** Yes. If the controller's power is cut off and is powered on afterwards, your settings will remain.

---

**Q:** My controller isn't pairing with the app. How do I fix this?

**A:** If the pairing process isn't successful, turn off your Bluetooth and re-enable it to try again. When starting the pairing process around multiple Bluetooth controllers, move your smart device closer to the controller you wish to connect the app with.

---

**Q:** Why does the app ask me for location permissions?

**A:** The app requires location permissions to find the relative position of your smart controller and communicate with existing Bluetooth devices already paired with the app. All Android devices prior to system version 12.0 will require location permissions to be turned on for the Bluetooth scan to be successful.

---

**Q:** Why do the port's level digits on the screen occasionally flash when I unplug a device?

**A:** The controller may have received electronic interference during the disconnection. To fix this, completely cut off power from the controller by unplugging all connected devices. Then plug them back into their previous ports and resume normal use.

# AIRTITAN FAQ

**Q:** Can I mount this crawlspace fan vertically?

**A:** Yes. The AIRTITAN can be mounted in any orientation, including vertically.

---

**Q:** Can I splice the cables to extend them or use my own probe?

**A:** We do not recommend hardwiring or splicing our fan's power wires. Such modifications may compromise electrical safety and will void this product's warranty.

---

**Q:** How do I reverse the airflow of my crawlspace fan?

**A:** To flip the fan blades, unscrew the bolts from the steel plate and the body. Flip the fans within the body and screw the bolts back in.

---

**Q:** How far can I mount the controller from the fan?

**A:** The fan to controller cable is six feet long, which is the distance you can mount the controller from the fan.

---

**Q:** Does the controller retain its settings after power is shut off?

**A:** Yes. If the controller's power is cut off and is powered on afterwards, your settings will remain.

---

**Q:** What connector does the controller use?

**A:** This fan's controller uses a 4-pin molex cord to connect with the fan.

# AIRTITAN FAQ

**Q:** Does this fan include grilles for outside installation or duct tubes for wall installation?

**A:** This product does not come included with ducting or grilles as accessories.

---

**Q:** Is this fan waterproof?

**A:** The AIRTITAN is IP55 rated for resistance against splashing water, but it is not completely waterproof and should not be submerged in water.

---

**Q:** Will this fan help with Radon mitigation?

**A:** Yes. The AIRTITAN will ventilate your crawlspace to exhaust radon gas emitting from soil.

---

**Q:** Do I need to use both an intake and an exhaust model?


**A:** In most cases, you will at least need to use an exhaust fan for crawlspace applications. Intake fans are optional.

# AC INFINITY PRODUCTS

## Register Booster Fans

The AIRTAP series is a line of register booster fans designed to quietly increase airflow coming from your central heat and air conditioning systems, increasing comfort for your home. Features a thermal controller with intelligent programming that will automatically adjust airflow strength in response to heating and cooling temperatures you have set.


---



## Duct Fans


The CLOUDLINE series is a line of duct fans designed to quietly ventilate AV rooms and closets, as well as various DIY air circulation and exhaust projects. Features a thermal controller with intelligent programming that will automatically adjust duct fan speeds in response to changing temperatures.

---



## Shutter Fans

The AIRLIFT series is a line of shutter exhaust fans designed to expel heat, moisture, odor, and dust from spaces like greenhouses, garages, attics, and sheds. It features an intelligent controller that includes temperature and humidity programming, adjustable fan speed controls, a timer, and an alarm system.

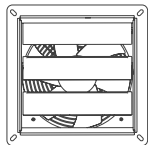

Discover the latest innovations in environmental controls at [acinfinity.com](http://acinfinity.com)

# WARRANTY

This warranty program is our commitment to you, the product sold by AC Infinity will be free from defects in manufacturing for a period of two years from the date of purchase. If a product is found to have a defect in material or workmanship, we will take the appropriate actions defined in this warranty to resolve any issues.

The warranty program applies to any order, purchase, receipt, or use of any products sold by AC Infinity or our authorized dealerships. The program covers products that have become defective, malfunctioned, or expressively if the product becomes unusable. The warranty program goes into effect on the date of purchase. The program will expire two years from the date of purchase. If your product becomes defective during that period, AC Infinity will replace your product with a new one or issue you a full refund.

The warranty program does not cover abuse or misuse. This includes physical damage, submersion of the product in water, incorrect installation such as wrong voltage input, and misuse for any reason other than intended purposes. AC Infinity is not responsible for consequential loss or incidental damages of any nature caused by the product. We will not warrant damage from normal wear such as scratches and dings.

Contact our dealers department at [dealers@acinfinity.com](mailto:dealers@acinfinity.com) or (626) 838-4656 for more information about our dealers and distributors program. Contact our customer service department at [support@acinfinity.com](mailto:support@acinfinity.com) or 626-923-6399 for product and warranty assistance. Our business hours are Monday through Friday, 9:00 am to 5:00 pm PST.



**If you have any issues with this product, contact us and we'll happily resolve your problem or issue a full refund!**



**COPYRIGHT © 2022 AC INFINITY INC. ALL RIGHTS RESERVED**

No part of the materials including graphics or logos available in this booklet may be copied, photocopied, reproduced, translated or reduced to any electronic medium or machine readable form, in whole or in part, without specific permission from AC Infinity Inc.





[www.acinfinity.com](http://www.acinfinity.com)